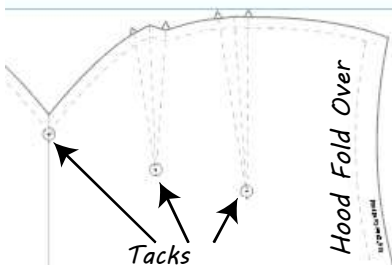
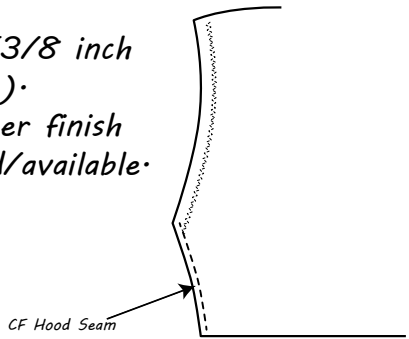
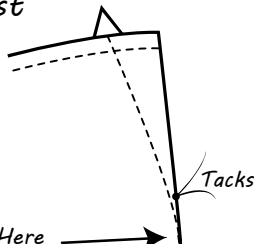
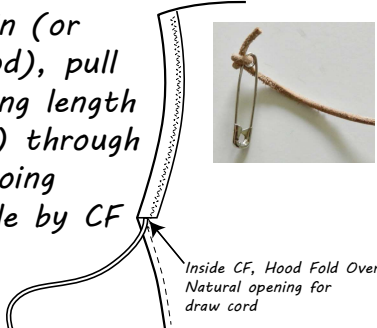
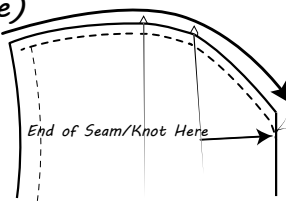

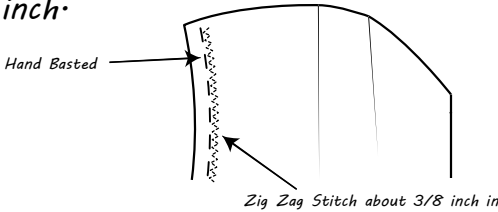


Pattern 1001, 1002, 1003

TOP: HOOD

<p>1. Make sure tacks are marked on all darts plus end of top of hood seam. (Total 5)</p> 	<p>6. Sew CF Hood (3/8 inch Seam Allowance). Overlock or other finish stitch if desired/available.</p> 
<p>2. Sew 4 darts in the hood (Right Sides Together matching notches). Sew to about 1/4 inch past tack mark. Leave extra thread to knot end at point of dart.</p> 	<p>7. Using a Safety Pin (or alternative method), pull draw cord (starting length around 36 inches) through Hood Fold Over going through inside hole by CF seam.</p> 
<p>3. Sew top of hood from front to fold in back. Sew to about 1/4 inch past tack mark. (3/8" Seam Allowance) Overlock or other finish stitch if desired/available.</p> 	<p>8. Thread draw cord through Toggle. Knot draw cord under toggle and trim cord to desired length.</p> 
<p>4. Baste Hood Fold (draw cord housing). (3/4 inch Allowance) Zig Zag stitch fold over at about 3/8-1/4 inch.</p> 	<p>9. Put hood aside and finish other sections of the shirt before proceeding.</p>
<p>5. Trim extra from inside of Hood Fold Over and remove baste stitches.</p> 